

# Product Specifications

## FlashLink® BLE Logger

<b>Measurement Range</b>	-22°F to 140°F (-30°C to 60°C)
<b>Accuracy</b>	+/- 0.9°F from -22°F to 140°F
<b>Temperature Resolution</b>	0.1°F/°C
<b>Data Capacity</b>	60,000 data points
<b>Logging Interval</b>	5 minutes
<b>Start mode</b>	Manual
<b>Transmission Range:</b>	2 seconds interval/~100ft (30.5m) at sight
<b>Shelf Life</b>	2 year
<b>Battery</b>	3.0v lithium battery
<b>Dimensions/Body</b>	1.38in x 0.43in (35mm x 11mm)
<b>Casing</b>	ABS plastic
<b>Waterproof Rating</b>	IP65
<b>Weight</b>	0.64 oz (18 grams) with battery
<b>LED</b>	Green and Red
<b>Certification</b>	CE Mark, FCC
<b>System Requirements</b>	Requires BLE Gateway Model 40993 to read and save data to the cloud
<b>Bluetooth Connection</b>	Bluetooth 4.0/5.0
<b>On-Line Tracing</b>	Customized web portal

The image shows the FlashLink BLE Logger product packaging, which is a green and white card. The card features the DeltaTrak logo at the top left and the product name 'FlashLink BLE Logger' at the top right. Below the product name, there are instructions for the shipper and the receiver in both English and Spanish. The shipper instructions are numbered 1 through 5, and the receiver instructions are numbered 1 through 5. The card also includes a 'START' button and a barcode with the number 62401972. A US quarter coin is shown next to the product for scale.

**SHIPPER INSTRUCTIONS**

1. Fill out the white shipping label below the BLE logger.
2. Remove peel away barcode label from BLE logger, apply to shipping document.
3. Press and hold START button until green ACTIVE LED stops flashing, then release the button.
4. After activation green LED will flash every 2 seconds for 30 seconds.
5. Use adhesive strips on back of card to attach BLE logger to the last pallet next to the door on top edge of pallet or carton.

**INSTRUCCIONES DEL EMBARCADOR**

1. Llene la etiqueta de envío blanca debajo del registrador BLE.
2. Retire la etiqueta de código de barras despegable del registrador BLE, aplíquela al documento del envío.
3. Mantenga presionado el botón de INICIO hasta que el LED verde ACTIVO deje de parpadear, luego suelte el botón.
4. Después de la activación, el LED verde parpadeará cada 2 segundos durante 30 segundos.
5. Utilice las tiras adhesivas del reverso de la tarjeta para fijar el registrador BLE al último pallet junto a la puerta en el borde superior del pallet o caja.

**RECEIVER INSTRUCTIONS**

1. Complete incoming documentation and inspection of the shipment.
2. Remove the green instruction card with the BLE logger and place into the designated recycling box.

**INSTRUCCIONES DEL RECEPTOR**

1. Completar la documentación entrante e inspección del envío.
2. Retire la tarjeta de instrucciones verde con el registrador bluetooth y colóquela en la caja de reciclaje designada.

**MODEL 40980-01**

FAA Compliance: STCA/DO 160

### Model 40980-01

- Single-use BLE temperature data logger
- Tracks environmental conditions inside vehicles during shipment
- Wirelessly transmits data by Bluetooth to Gateway device
- Temperature and location data stored in cloud-based FlashTrak web portal

DeltaTrak manufactures and operates under an ISO 9001:2015 registered quality management system

SS 40980-01 24D1

